


Handling instructions


Dowel set

How to close and open a
B-coolant hole

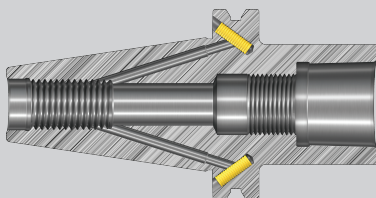


Close B-coolant hole


Insert dowel with an assembling tool.

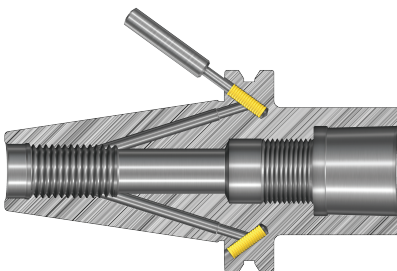

Tighten the clamping screw.

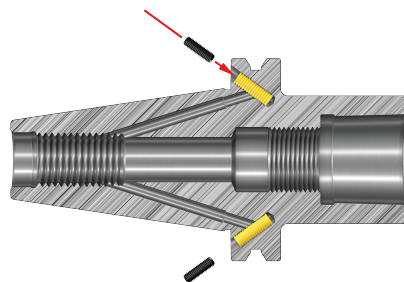

Result after finished mounting.

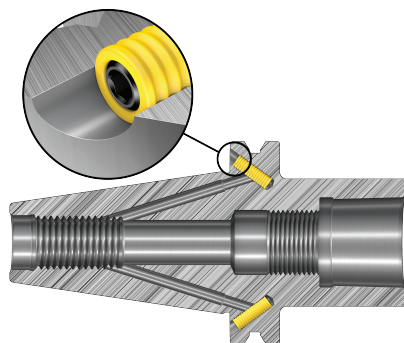


Head office:
AB Sandvik Coromant
SE-811 81 Sandviken, Sweden
www.sandvik.coromant.com
E-mail: info.coromant@sandvik.com

92057

© AB Sandvik Coromant
2018.05 Rev1 2021.06
Rev2 2022.08

Open B-coolant hole

Remove the clamping screw.

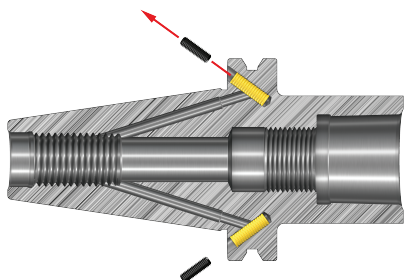

Ordering information:

SK40: 5643 017-01M
(package of 20 dowels and screws)

SK50: 5643 017-02M
(package of 20 dowels and screws)

Important information!

Use every dowel only once!

Use a standard M3 screw (tightened with 3-4 turns) and pull out the dowel.

