



Handling instruction for Turning adaptors

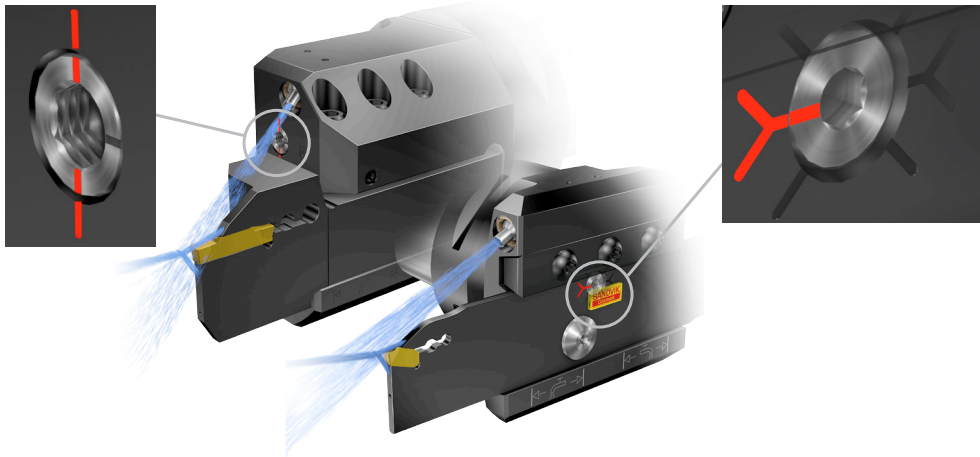


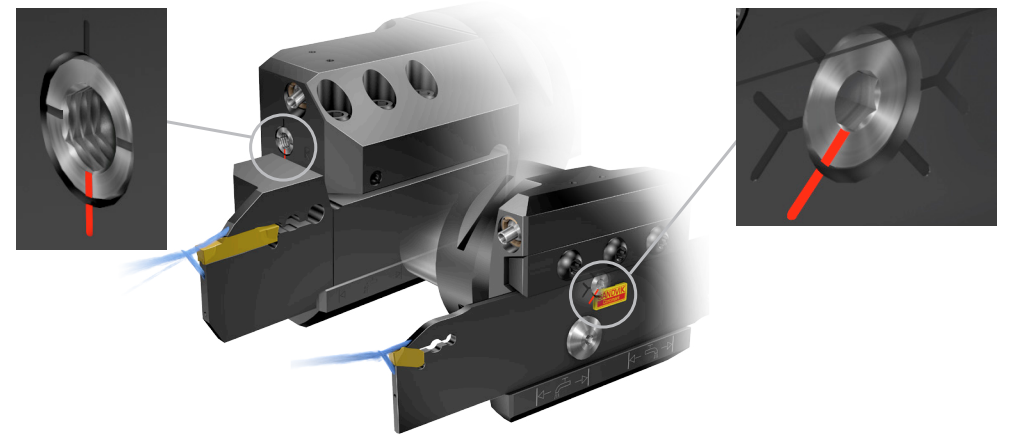

Upper and under coolant



Under coolant

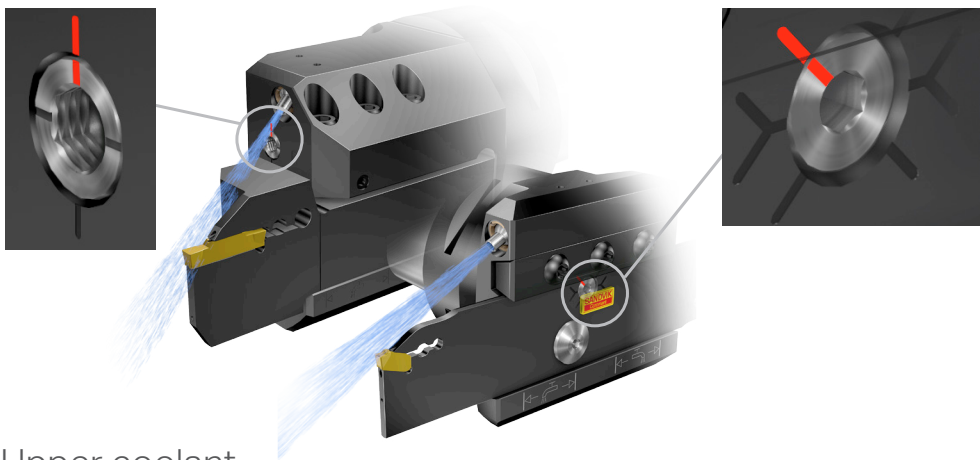

Upper coolant

Head office:
AB Sandvik Coromant
SE-811 81 Sandviken, Sweden
www.sandvik.coromant.com
E-mail: info.coromant@sandvik.com

92040

© AB Sandvik Coromant 2016.11

