


HSK basic adaptors


Balancing holes

HSK40/HSK50

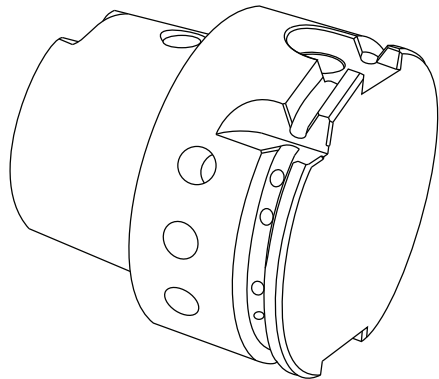

HSK63 / HSK80

HSK100 / HSK125 / HSK160

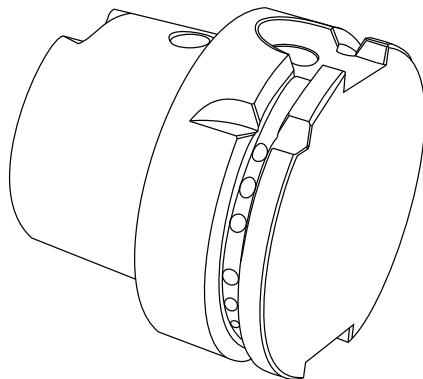


Rev1 22.01

Rev2 22.11


Rev3 24.05

Difference between A/C and A/C/T

- Precise groove (tighter and closer tolerances)
- Normal groove (same as HSK-A/C)

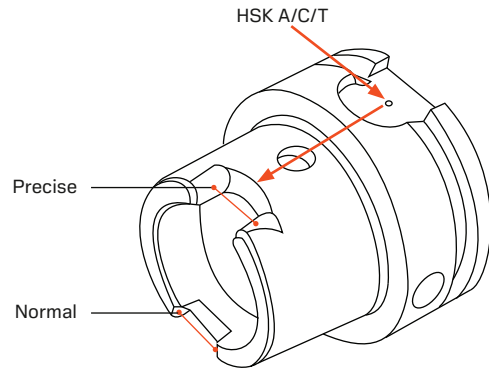




Coolant tube

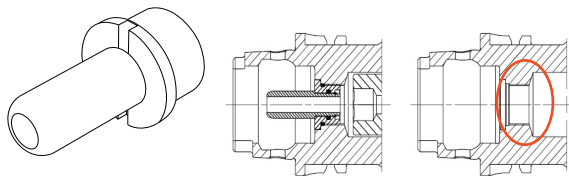

HSK A/C/T-size	Basic holder	Key	Torque (Nm)
40	5692 020-02	5680 094-02	10
50	5692 020-03	5680 094-03	15
63	5692 020-04	5680 094-04	20
80	5692 020-05	5680 094-05	25
100	5692 020-06	5680 094-06	30
125	5692 020-07	5680 094-07	30
160	5692 020-08	5680 094-08	30

Rebalancing with data chip

According to ISO12164-1:2020

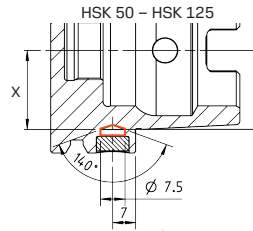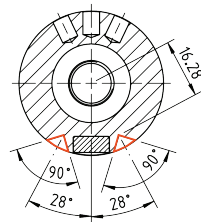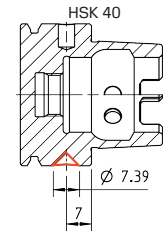

Coupling size	X
HSK 50	17.55
HSK 63	24.28
HSK 80	32.98
HSK 100	43.03
HSK 125	55.63
HSK 160	73.18